

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane Insert

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the engine mount.
2. Remove any flash lines from the voids in the original bush and clean any dirt and corrosion.
3. Fit polyurethane insert into the engine mount bush with top face sitting against the chassis, as shown in *Figure 1*.
5. Re-fit engine mount to the vehicle. Tension all hardware to manufacturers recommended torque settings.

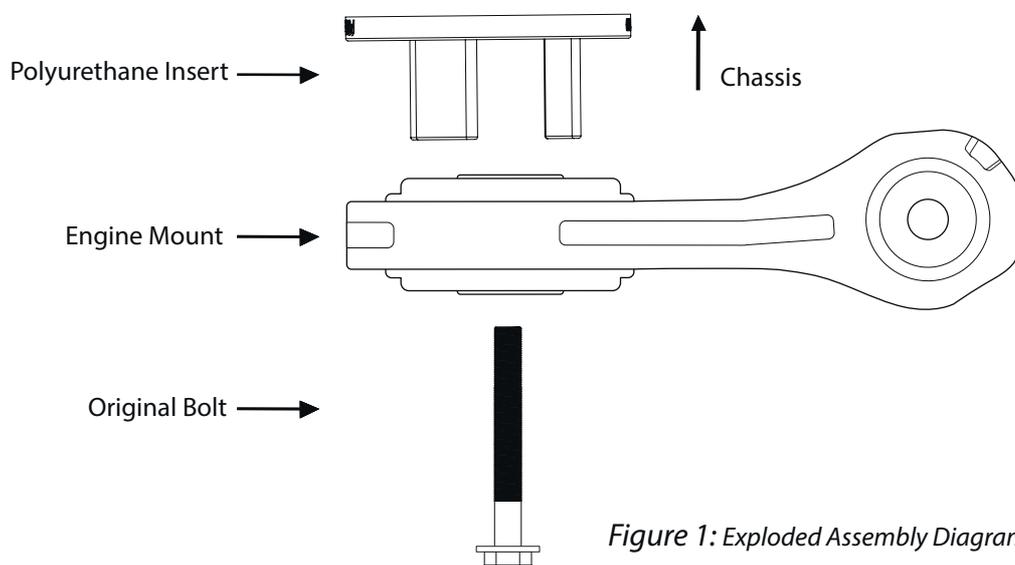


Figure 1: Exploded Assembly Diagram